

Activate a machine

1 Select the corresponding machine with the help of the grey arrows.

3 Your machine is activated. Press "Exit" to exit your session.

2 Enter your personal code.

4 The system stops automatically at the end of the program.

Open the door (if necessary)

1 Select the corresponding machine with the help of the grey arrows.

2 Press the "Open" button.

Vous pouvez maintenant ouvrir la porte via le mécanisme ou le bouton se trouvant sur la machine et vider votre linge.

3 Press "OK" and open the machine door.

Stop a machine

1 The payment system stops automatically at the end of the program selected on the machine. However, you can stop it early if you want to cancel the program.

2 Select the corresponding machine with the help of the grey arrows.

3 Enter your personal code.

4 Press "OK" to confirm.

5 Your machine is stopped. Press "Exit" to exit your session.

Possible failures

Erreur de connexion à la machine.
Veuillez vérifier que l'alimentation électrique de la machine est bien branchée.
Si l'erreur persiste, appelez gratuitement le **0800 426 555**

1 Check the switch on the machine or the electrical outlet.

Vous n'avez plus assez de crédit sur votre compte pour pouvoir utiliser cette machine !
Pour recharger votre compte, connectez-vous à l'adresse : **www.eeproperty.ch**
ou suivez les instructions de paiement reçues par courrier.

2 Please reload your account according to the instructions received by mail.

3 If the screen no longer reacts, press and hold the pushbutton under the screen for 5 seconds, then wait about 5 minutes until the machines appear.

4 If the failure persists, call **0800 426 555** (Free service 7 days a week).